



VARMILO

阿米洛机械键盘

Varmilo Mechanical Keyboard

80%: VA87Mac、VA88Mac
100%: VA104Mac、VA105Mac
110%: VA108Mac、VA109Mac

前言 Preface

Varmilo音译即为“阿米洛”，取自世界语“Via”“armilo”。寓意：为您定制的专属装备。阿米洛在保证优良做工的同时，希望能够满足顾客的个性化定制需求。此外阿米洛也坚持在有限的键盘空间内进行创作，试图让用户的桌面更加丰富多彩。

——键盘艺术家·阿米洛

Varmilo with the transliteration “阿米洛” in Chinese, is rooted from the Esperanto words “via” and “armilo”, implying equipment customized for you. Varmilo is dedicated to meeting customers' personalized demands while ensuring fine workmanship. It also persists in innovation in limited space of keyboards, trying to make customers' desktops more colorful and enjoyable.

By keyboard artist Varmilo

产品特性 Product Feature

全新系列的阿米洛机械键盘均采用德国进口Cherry MX机械轴，具有稳定的内部结构与触感。

The brand-new Varmilo mechanical keyboard series adopt the Cherry MX switches from Germany with stable internal structures and tactility.

日常保养 Daily Maintenance

先用拔键器拔掉键帽，然后倒置键盘，轻轻拍打键盘背面，将残渣倒出。再用毛刷清理键盘上粘附的残渣、灰尘。若还有残留，用干净的抹布蘸酒精进行擦拭，直到干净为止。然后放至阴凉通风处，晾干。使用过程中，请勿频繁拔插、拉扯、弯折键盘线，尤其是线键分离的键盘，容易造成键盘插口处松动或脱落。

To clean a keyboard, pull out the keycaps using a key puller, put the keyboard upside down, pat the back of the keyboard to pour out impurity, and brush off the impurity and dust that are adhered to the keys. If residuals exist, wipe them off using a clean cloth with some alcohol. After that, dry the keyboard in a cool and ventilated place. To avoid a loose or fallen USB port, do not frequently plug, unplug, drag or bend a keyboard cable, especially for a keyboard with separate cable and keys.

模式切换 Modes Swapping

- 键盘出厂默认为Windows模式。
- Fn+A, 长按3秒, Caps Lock灯闪三下, 键盘切换为Mac模式。
- Fn+W, 长按3秒, Caps Lock灯闪三下, 键盘切换为Windows模式。
- 若Fn+A, 长按3秒, Caps Lock灯不闪, 说明键盘已处于Mac模式下。
- 若Fn+W, 长按3秒, Caps Lock灯不闪, 说明键盘已处于Windows模式下。
- Fn+Esc, 长按3秒, Caps Lock灯闪三下, 键盘恢复为出厂设置 (Windows模式)。
- 关机断电及休眠后, 会自动记忆之前所有设定功能, 启动后自动回到设定的模式。
- Keyboard defaulted mode is Windows.
- By pressing Fn + A for about 3 seconds until Caps Lock flashes, the keyboard will swap to Mac mode.
- By pressing Fn + W for about 3 seconds until Caps Lock flashes, the keyboard will swap to Windows mode.
- If Caps Lock key does not flash when pressing Fn+A, it means the keyboard was already in Mac mode.
- If Caps Lock key does not flash when pressing Fn+W, it means the keyboard was already in Windows mode.
- By pressing Fn+Esc for about 3 seconds until Caps Lock flashes, the keyboard will turn to be default mode.
- When the computer is restarted after shutdown or hibernation, previous keyboard settings will be resumed.

Mac模式-多媒体按键 Mac Mode-Multi-Media Keys



降低屏幕亮度
Brightness -



提高屏幕亮度
Brightness+



显示所有窗口
Display all interfaces



显示应用程序
Display all apps



降低键盘灯光亮度
Keyboard backlight
brightness-



提高键盘灯光亮度
Keyboard backlight
brightness+



上一曲
Last song



暂停/播放
Pause/Play



下一曲
Next song



静音
Mute



音量减
Volume -



音量加
Volume +

Windows模式-灯效调节 Windows Mode-Backlight Adjustment

- Fn+→可在常亮和呼吸两种模式中进行切换。
- Caps Lock、Scroll Lock、Number Lock不参与灯光效果。
- 在常亮模式中按Fn+↓降低灯光亮度，Fn+↑提高灯光亮度,4个等级(单向调节不循环)。
- 在呼吸模式中按Fn+↓降低呼吸速度，Fn+↑提高呼吸速度,4个等级(单向调节不循环)。
- Fn+→swapping between “full backlit” mode and “breathing” mode.
- Caps Lock, Scroll Lock, Num Lock does not involved in backlight effect.
- Under “full backlit” mode, Fn+↓ decrease the bright ness Fn+↑ Increase the brightness(no circulation).
- Under “breathing” mode, Fn+↓ decrease the breathing speed, Fn+↑ Increase the breathing speed(no circulation).

Windows模式-多媒体功能 Windows Mode-Multi-Media Functions

阿米洛键盘拥有丰富的多媒体功能，按住Fn以及对应的按键即可实现。

Varmilo mechanical keyboards are featured with rich multi-media functions. To enable a multi-media function, press Fn and the key corresponding to the function.

按键组合 (Key Combinations)	模式名称 (Mode Name)	按键组合 (Key Combinations)	模式名称 (Mode Name)
Fn+F7	上一曲(Last song)	Fn+F10	静音(Mute)
Fn+F8	暂停/播放(Pause/Play)	Fn+F11	音量减(Volume -)
Fn+F9	下一曲(Next song)	Fn+F12	音量加(Volume +)

Windows模式-其他功能 Windows Mode-Other Functions

- Fn+右Ctrl, 按一次, 为菜单。
- Fn+任意Win, 按一次, 锁定或开启Win。
- Fn+左Win, 长按3秒, Caps Lock灯闪三下, Fn和左Win功能调换。
- Fn+左Ctrl, 长按3秒, Caps Lock灯闪三下, Caps Lock和左Ctrl功能调换。
- 在Windows模式下支持全键无冲。
- Fn+ right Ctrl: Menu.
- Fn+Win : Enable/Disable Win key.
- Fn+left Win(more than 3 seconds), Caps Lock flashes three times, Fn and Win key swapped.
- Fn+left Ctrl (more than 3 seconds), Caps Lock flashes three times, Caps Lock and left Ctrl key swapped.
- NKRO under Windows mode.

Windows模式-多媒体按键 Windows Mode-Multi-Media Keys

110%尺寸多媒体按键
110% Size Special Functions



音乐播放器
Music player



我的邮件
Email



计算器
Calculator



我的电脑
My PC

保修卡

尊敬的用户，感谢您对Varmilo阿米洛的信任和支持。为了保护您的合法权益，更好的为您服务，我公司严格按照中华人民共和国相关法律，为您提供三包售后服务，产品保修说明如下：

1. 自您从授权经销商或官方途径购买Varmilo阿米洛产品之日起，若产品出现性能故障和品质问题，您将享有七天包退，十五天包换及一年免费保修服务。
2. 若您购买的产品，在超出上述保修期或产品因为人为原因损坏（自行拆卸，进水与烟灰，输入电流电压不当等）与自然灾害（如水灾，火灾，鼠害等）引起的损害，不在免费保修范围，您仍可享有Varmilo阿米洛提供的有偿维修服务，以使您的产品能够继续使用。
3. 消耗品（如脚垫、防滑贴）及赠品配件，不在三包的保修范围内。
4. 维修和更换之后的产品或配件，将延续送修之前所剩余的保修天数，或自Varmilo阿米洛将产品运送至您手上之日起90天。
5. 在您向Varmilo阿米洛提出维修和更换服务之前，请先参阅Varmilo阿米洛官网的产品疑难解答，网址为：Varmilo.com或致电Varmilo阿米洛售后服务电话：0755-26484009，若疑难解答无法帮您排除故障，您可将产品或配件交付至授权经销商或Varmilo阿米洛官方进行检测，我们会尽快为您提供相关服务。在将产品或配件送检之前，务必将非标准配件、定制配件提前取下，以免遗失或损坏。如：定制键帽，其他厂商的配件，私人LOGO等。
6. 本说明书的最终解释权 and 所有权属阿米洛品牌所有，后续产品升级请用用户自行留意，持续关注，感谢您一路的支持与配合！

产品型号		产品号		出厂日期	
用户姓名		联系电话		购买日期	
用户地址					
问题描述：					

Warranty card

Dear users, thank you for great trust and support to Varmilo. In order to protect your legal rights and offer the best service, our company provides you with the after-sales service strictly in accordance with the laws of People's Republic of China, warranty terms are as follow:

1. Starting from the date you purchase Varmilo products from the authorized dealers or official channels, you will be entitled to 1-year free warranty service if the product has performance and quality problems.
2. The purchased product will be no longer under free warranty with the following conditions:
 - a: Exceed 1 year warranty period.
 - b: Damage caused by man-made (self-demolition, water splash, ash contamination, input current and voltage inappropriate)
 - c: Natural disasters (such as floods, fire, rodents) However, you will still be entitled to the paid maintenance service provided by Varmilo.
3. Consumables (such as the foot pad, anti-skid stickers, ect.) and gifts accessories are not under free warranty.
4. Products or accessories after repair or replacement will continue for the remaining of the warranty period, or 90 days starting from the date of receipt.
5. Please refer to the Varmilo Product Troubleshooting at <http://www.varmilo.com> or contact Varmilo sales representative before you request repair and replacement service. If the mentioned solutions can not solve your problem, you can deliver the product or accessory to an authorized dealer or Varmilo for testing. We will provide you with relevant services as soon as possible. Before submitting the product or accessories, please be sure to remove the non-standard parts and the customized parts in advance to avoid any loss or damage, such as: customized keycap, accessories from other manufacturers, private logo and so on.
6. Varmilo reserves the right of final interpretation and ownership of this manual. Please pay close attention to subsequent product update. Thank you!

Model No.		Serial No.		Manufacturing Date	
Name		Tel.No.		Purchasing Date	
Add					
Problem Description:					



官网
Official Website



微博
Weibo



微信
WeChat

扫码即可了解有关阿米洛产品的最新信息
Scan the QR code for more detailed and updated news of Varmilo

Keyboard
artist



VARMILO

深圳市志海和科技有限公司
ShenZhen ZhiHaiHe Tech Co.,Ltd
电话(TEL):+86-755-2648 4009
传真(FAX):+86-755-2644 4428
官网(WEB):varmilo.com

地址(ADD):中国广东省深圳市光明新区田寮社区第十工业区3栋2楼B区
Unit B,2nd Floor,Block 3,10th Industrial Zone,Tian Liao CommUNITY,Guang Ming
New District,Shen Zhen,China.

Mac 80% 100% 110% CHS INST -4

修订日期: 20170911
PRINTED IN CHINA